


# SHIMANO

## CURADO S A-RB

## CU-301E

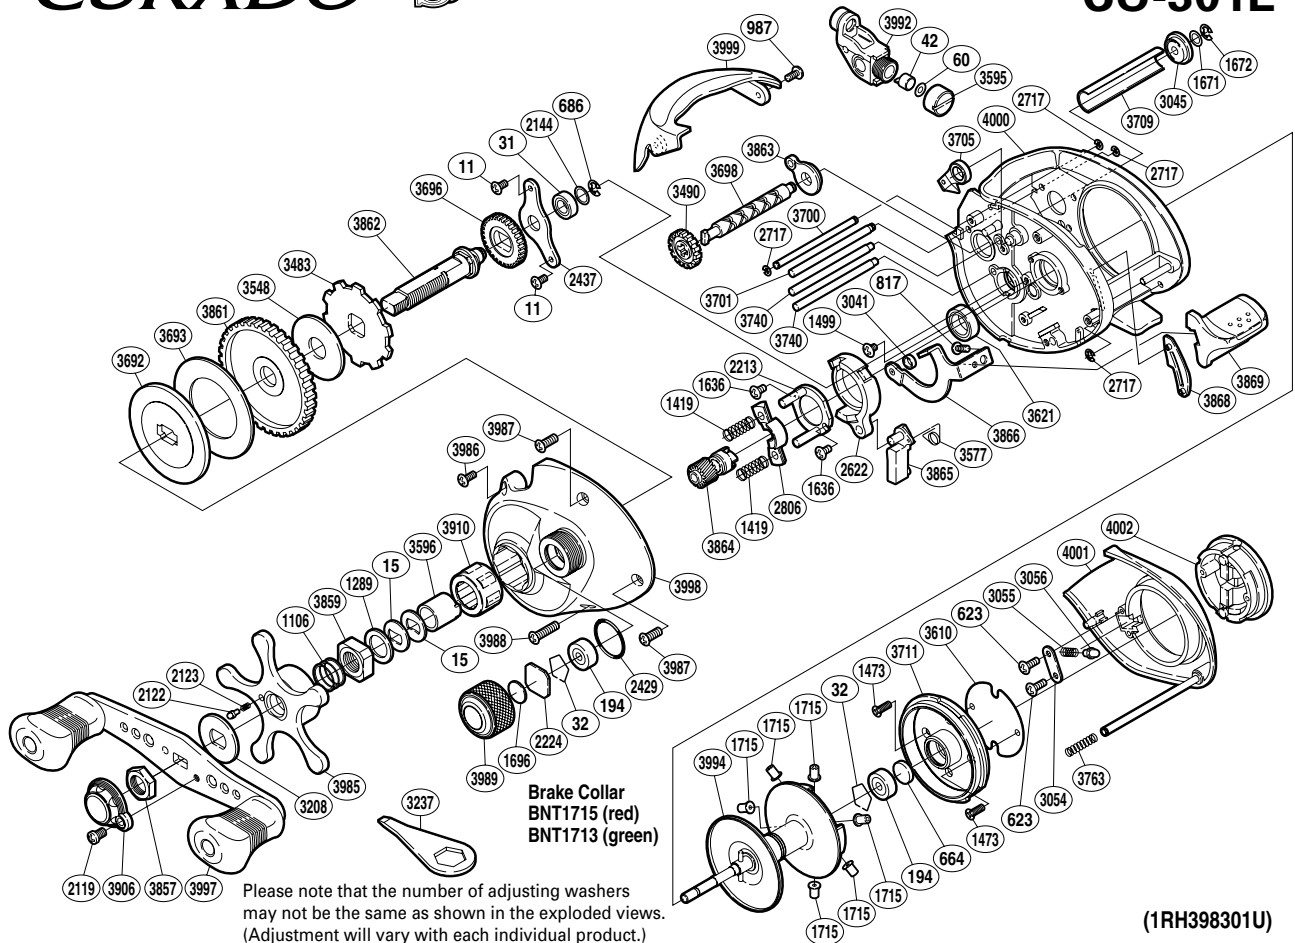

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2437	Drive Shaft Retainer	BNT3857	Handle Nut
BNT0015	Drag Spring Washer	BNT2622	Clutch Cam	BNT3859	Star Drag Nut
BNT0031	Ball Bearing	BNT2717	E Lock	BNT3861	Drive Gear
BNT0032	Bearing Retainer	BNT2806	Yoke	BNT3862	Drive Shaft
BNT0042	Line Guide Pawl	BNT3041	Clutch Plate Shaft Support	BNT3863	Worm Bushing A
BNT0060	Spacer	BNT3045	Worm Bushing B	BNT3864	Pinion Gear
BNT0194	Ball Bearing	BNT3054	Click Pin Retainer	BNT3865	Clutch Pawl
BNT0623	Screw	BNT3055	Click Spring	BNT3866	Clutch Plate
BNT0664	Spacer B	BNT3056	Click Pin	BNT3868	Clutch Bar Guide B
BNT0686	E Lock	BNT3208	Star Drag Click Plate	BNT3869	Quick-Fire II Clutch Bar
BNT0817	Screw	BNT3483	Anti-Reverse Ratchet	BNT3906	Handle Retainer
BNT0987	Screw	BNT3490	Idle Gear	BNT3910	Roller Clutch Bearing
BNT1106	Star Drag Spring	BNT3548	Drag Washer	BNT3985	Star Drag
BNT1289	Star Drag Spacer	BNT3577	Clutch Pawl Spring	BNT3986	Screw
BNT1419	Yoke Spring	BNT3595	Pawl Cap	BNT3987	Screw
BNT1473	Screw	BNT3596	Roller Clutch Inner Tube	BNT3988	Screw
BNT1499	Screw	BNT3610	Brake Case Spacer	BNT3989	Cast Control Cap
BNT1636	Screw	BNT3621	Ball Bearing	BNT3992	Line Guide
BNT1671	Washer	BNT3692	Key Washer	BNT3994	Spool Assembly
BNT1672	E Lock	BNT3693	Drag Washer	BNT3997	Handle Assembly
BNT1696	Cast Control Spacer	BNT3696	Idle Gear	BNT3998	Left Side Plate
BNT1715	Brake Collar (red)	BNT3698	Worm Shaft	BNT3999	Thumb Rest
BNT2119	Screw	BNT3700	Line Guard	BNT4000	One-Piece Frame
BNT2122	Click Pin	BNT3701	Level Wind Guide	BNT4001	Right Side Plate
BNT2123	Click Spring	BNT3705	Anti-Reverse Pawl	BNT4002	Turnkey Dial
BNT2144	Washer	BNT3709	Level Wind Guard		
BNT2213	Clutch Cam Retainer	BNT3711	Brake Case		
BNT2224	Spool Tension Spacer	BNT3740	Stabilizer Bar	BNT1713	Brake Collar (green) (accessory)
BNT2429	O Ring	BNT3763	Side Plate Spring	BNT3237	Wrench (accessory)